




## INSTALLATION INSTRUCTIONS

Telltale Assembly  
for UniCast and Insert Holders

### Accessory Kit

Used to monitor the space between a rupture disk and relief valve or the presence of back pressure in a header system.

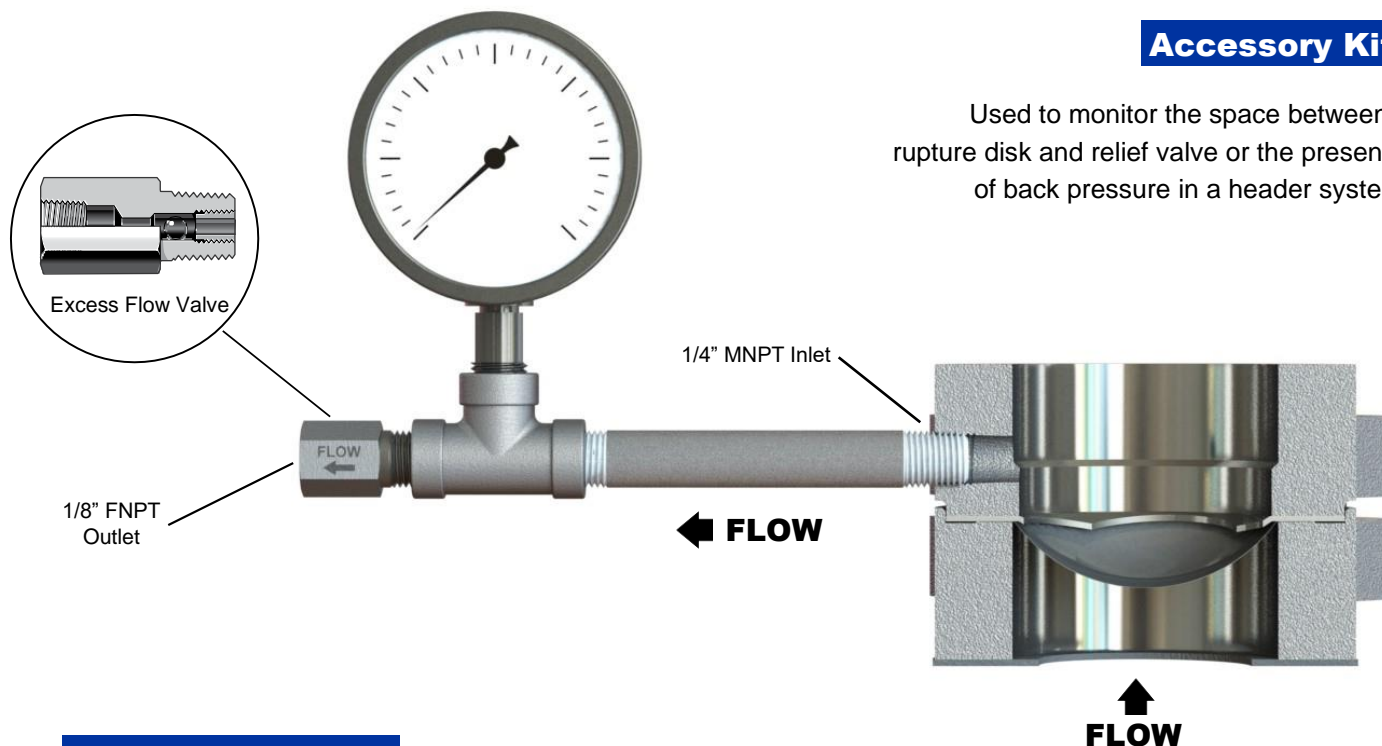


### Excess Flow Valve


For proper use, excess flow valve should always be oriented either parallel to Earth or angled in an upward direction. Valve should never be angled downward during operation.



#### Proper Orientation

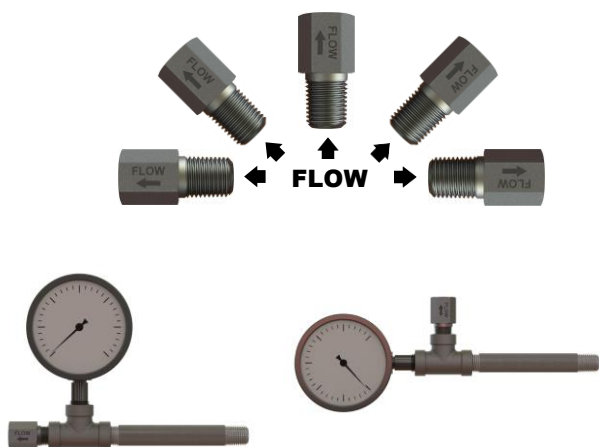

#### Improper Orientation

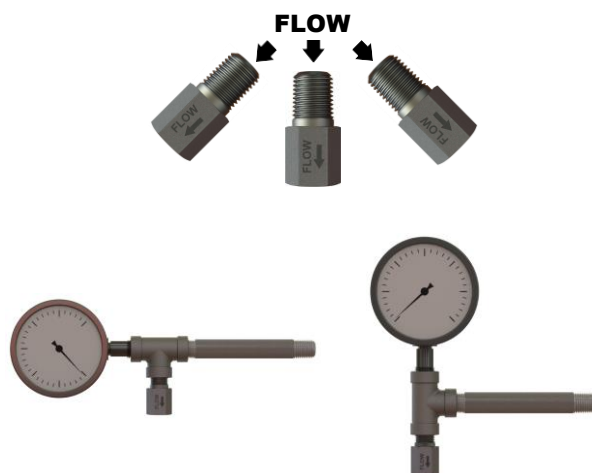

[www.zookdisk.com](http://www.zookdisk.com)

**Serving America, Central & South America**  
16809 Park Circle Drive, Chagrin Falls,  
Ohio 44022 USA  
Toll Free: +1 800 543 1043  
Phone: +1 440 543 1010  
E-mail: [sales@zookdisk.com](mailto:sales@zookdisk.com)

**Serving Europe, Middle East & Africa**  
Navigation House, Bridge Street  
Killamarsh, Sheffield,  
S21 1AL UK  
Phone: +44 (0) 1909 560999  
E-mail: [sales.europe@zookdisk.com](mailto:sales.europe@zookdisk.com)

**Serving Canada**  
4400 South Service Rd,  
Burlington, Ontario L7L 5R8 CA  
Toll Free: +1 800 370 6057  
Phone: +1 905 681 2885  
E-mail: [sales.canada@zookdisk.com](mailto:sales.canada@zookdisk.com)

**Serving Asia Pacific**  
Menara LGB TTDI, Unit 6-3A, Level 6,  
1, Jalan Wan Kadir, Taman Tun Dr. Ismail,  
60000 Kuala Lumpur, Malaysia  
Phone: +603 2706 0098  
E-mail: [sales.asia@zookdisk.com](mailto:sales.asia@zookdisk.com)