



# INSTALLATION INSTRUCTIONS

## For Flat Seated Bolted Type URA Series Disk Holders

### Rupture Disk Series: URA

#### 1) WARNING

- a) Read the complete instructions before attempting to install the rupture disk and holder assembly.
- b) It is the user's responsibility for the design of adequate venting and installation of adequate vent piping or directional flow after rupture occurs with the rupture disk as intended. When size is specified, ZOOK assumes that adequate provisions have been made by the purchaser and/or user for proper venting of a system to relieve the specific pressure. Locate the rupture disk where people or property will not be exposed to the system discharge in the event of rupture. Vent toxic or flammable fumes to a safe location to prevent personnel injury or property damage.
- c) It is the user's responsibility to specify the burst pressure rating at the coincident temperature at which the rupture disk is to be used. A rupture disk is a temperature sensitive device. The burst pressure of the rupture disk is directly affected by its exposure to the coincident temperature. Failure to utilize a rupture disk at the specified coincident temperature could cause premature failure or over pressurization of the system.
- d) Particles may discharge when the rupture disk ruptures. These particles may be part of the rupture disk itself, or other environmental matter in the system. It is the user's responsibility to ensure that the particles are directed to a safe area to prevent personnel injury or property damage.
- e) Rupture disk service life is affected by corrosion, creep and fatigue, and physical damage. These conditions will derate the rupture disk to a lower pressure. The user should be prepared to handle a premature failure of the rupture disk. The media or other environmental conditions should not allow for any build-up or solidification of media on the rupture disk. This may increase the burst rating of the rupture disk.
- f) ZOOK rupture disks, when installed in their respective holders correctly, will provide a very good seal for liquids and most gases or vapors. However, ZOOK cannot guarantee the leakage rate of the disk seal without prior knowledge of the requirement and details of the piping layout. Consult ZOOK for guidance if leakage is critical to the installation.
- g) The customer and/or its installer shall be responsible for the proper installation of rupture disk device into a system. **Recommended torque values do not consider piping stress or alignment.**
- h) Customer and/or its installers shall be responsible for improper installation and physical damage resulting there from, including, but not limited to, damage resulting from leakage, improper torquing, and/or failure to follow installation instructions.
- i) ZOOK standard Terms and Conditions of Sale apply unless otherwise stated in writing by the manufacturer.

#### 2) HOLDER INSPECTION AND PREPARATION – NEW HOLDERS

- a) Carefully remove the rupture disk holder from its packaging and disassemble by removing the pre-assembly tab screws for insert type holders, or pre-assembly capscrews for bolted type holders, and lift the outlet flange up and set aside. Discard the brown shipping paper sandwiched between the two halves of the holder.
- b) Wipe with a clean cloth and suitable solvent to remove all rust inhibitors and foreign material.
- c) Inspect the seat area for any scratches, dents, or nicks. Imperfections on these surfaces can cause leaks. **DO NOT USE** if any scratches, dents or nicks are detected, contact ZOOK immediately for instructions.
- d) The holder must not be machined or modified in any way without prior written approval from ZOOK.

#### 3) HOLDER INSPECTION AND PREPARATION – EXISTING HOLDERS

- a) For existing installations remove the complete assembly (disk and holder) from the piping by removing the companion flange studs and nuts and place on a clean flat surface.
- b) Disassemble the assembly by removing the pre-assembly tab screws for insert type holders, or preassembly capscrews for pre-torque and bolted type holders, and lift the outlet flange up and set aside.
- c) Remove the used rupture disk from the holder.

[www.zookdisk.com](http://www.zookdisk.com)

**Serving America, Central & South America**  
16809 Park Circle Drive, Chagrin Falls,  
Ohio 44022 USA  
Toll Free: +1 800 543 1043  
Phone: +1 440 543 1010  
E-mail: [sales@zookdisk.com](mailto:sales@zookdisk.com)

**Serving Europe, Middle East & Africa**  
Navigation House, Bridge Street  
Killamarsh, Sheffield,  
S21 1AL UK  
Phone: +44 (0) 1909 560999  
E-mail: [sales.europe@zookdisk.com](mailto:sales.europe@zookdisk.com)

**Serving Canada**  
4400 South Service Rd,  
Burlington, Ontario L7L 5R8 CA  
Toll Free: +1 800 370 6057  
Phone: +1 905 681 2885  
E-mail: [sales.canada@zookdisk.com](mailto:sales.canada@zookdisk.com)

**Serving Asia Pacific**  
Menara LGB TTDI, Unit 6-3A, Level 6,  
1, Jalan Wan Kadir, Taman Tun Dr. Ismail,  
60000 Kuala Lumpur, Malaysia  
Phone: +603 2706 0098  
E-mail: [sales.asia@zookdisk.com](mailto:sales.asia@zookdisk.com)



# INSTALLATION INSTRUCTIONS

## For Flat Seated Bolted Type URA Series Disk Holders

### Rupture Disk Series: URA

- d) Inspect the holder's mating surfaces for foreign material. Remove any adhered gasket material from the previous installation and clean the gasket surfaces of the holder thoroughly. Dirt and grit on these surfaces can cause leaks.
- e) Inspect the seat area for any scratches, dents, or nicks. Imperfections on these surfaces can cause leaks. **DO NOT SCRAPE OR SCRATCH** any seating surface. If wiping these surfaces with a clean cloth and suitable solvent does not remove surface residue, fine emery cloth or steel wool may be utilized. Care should be exercised not to exert sufficient pressure on the emery cloth or steel wool to cut or groove these sealing surfaces. **DO NOT USE** if any scratches, dents or nicks cannot be removed, contact ZOOK immediately for instructions.
- f) The holder must not be machined or modified in any way without prior written approval from ZOOK.

#### 4) ASSEMBLY OF THE RUPTURE DISK AND HOLDER

- a) **CAUTION:** All ZOOK rupture disks are recommended for installation into holders manufactured by ZOOK ONLY.
- b) **CAUTION:** Rupture disks are precision instruments and must be handled with extreme care. Rupture disks should be installed only by qualified personnel familiar with rupture disks and proper piping practice.
- c) **CAUTION:** ZOOK does not recommend reinstalling a rupture disk that has been removed from its holder. Reinstallation may adversely affect the sealing capabilities and/or the performance of the rupture disk.
- d) Place the holder inlet on a clean flat work surface with the flow arrows pointing up from the work surface.
- e) Carefully remove the disk from its package.
- f) Examine the disk carefully before installation. **DO NOT USE IF THERE IS ANY INDICATION OF DAMAGE.** Handle with extreme care.
- g) Place the disk into the inlet counterbore with the flow arrows pointing up from the work surface so the convex (dome) side of the disk faces down towards the work surface and the alignment pin located in the inlet holder is engaged with the corresponding hole in the disk tab. **DO NOT USE A GASKET.**
- h) Carefully align and place the outlet flange into the inlet counterbore with the alignment pin located in the inlet holder is engaged with the corresponding hole in the outlet and the with the flow arrows pointing up from the work surface.
- i) For "insert" type URAI holders, fasten the assembly together by reinstalling the pre-assembly tabs and screws as shown in figure 1. The pre-assembly screws should be snug, NOT wrench-tight.
- j) For "pre-torque" type URAP holders, fasten the assembly together by reinstalling the pre-assembly capscrews as shown in figure 2 finger tight before torquing. 12 point high strength capscrews are supplied with the assembly, **DO NOT SUBSTITUTE.** A 12 point, deep length, thin wall socket is required for correct torquing.
- k) Using a torque wrench, develop the required torque incrementally in a minimum of four (4) steps in a crisscross pattern. The initial torque should be no more than 30% of the final required torque listed in table #1. After following this sequence, a final tightening should be performed capscrew-to-capscrew to ensure that all bolts have been evenly torqued
- l) **For URA holders with Teflon Sleeve Insert and Sintered:**

##### (1) New Installation

- (1) Inspect the O-ring groove of the holder for any scratches, dents, nicks, or debris. Imperfections in the groove can cause leaks. **DO NOT USE** if any scratches, dents, or nicks are present, contact ZOOK immediately when damaged.
- (2) Inspect the provided O-ring for scratches, dents, or nicks. **DO NOT USE** if O-ring is damaged, contact ZOOK immediately for replacements.
- (3) Place the O-ring in the groove of the holder and follow section 4) i) or j).
- (4) O-ring is a custom size, contact ZOOK for replacements.

[www.zookdisk.com](http://www.zookdisk.com)

**Serving America, Central & South America**  
16809 Park Circle Drive, Chagrin Falls,  
Ohio 44022 USA  
Toll Free: +1 800 543 1043  
Phone: +1 440 543 1010  
E-mail: [sales@zookdisk.com](mailto:sales@zookdisk.com)

**Serving Europe, Middle East & Africa**  
Navigation House, Bridge Street  
Killamarsh, Sheffield,  
S21 1AL UK  
Phone: +44 (0) 1909 560999  
E-mail: [sales.europe@zookdisk.com](mailto:sales.europe@zookdisk.com)

**Serving Canada**  
4400 South Service Rd,  
Burlington, Ontario L7L 5R8 CA  
Toll Free: +1 800 370 6057  
Phone: +1 905 681 2885  
E-mail: [sales.canada@zookdisk.com](mailto:sales.canada@zookdisk.com)

**Serving Asia Pacific**  
Menara LGB TTDI, Unit 6-3A, Level 6,  
1, Jalan Wan Kadir, Taman Tun Dr. Ismail,  
60000 Kuala Lumpur, Malaysia  
Phone: +603 2706 0098  
E-mail: [sales.asia@zookdisk.com](mailto:sales.asia@zookdisk.com)

- (5) Figure 1 displays a teflon sleeved holder. Teflon sintered holders are similar except they do not have a sleeve.

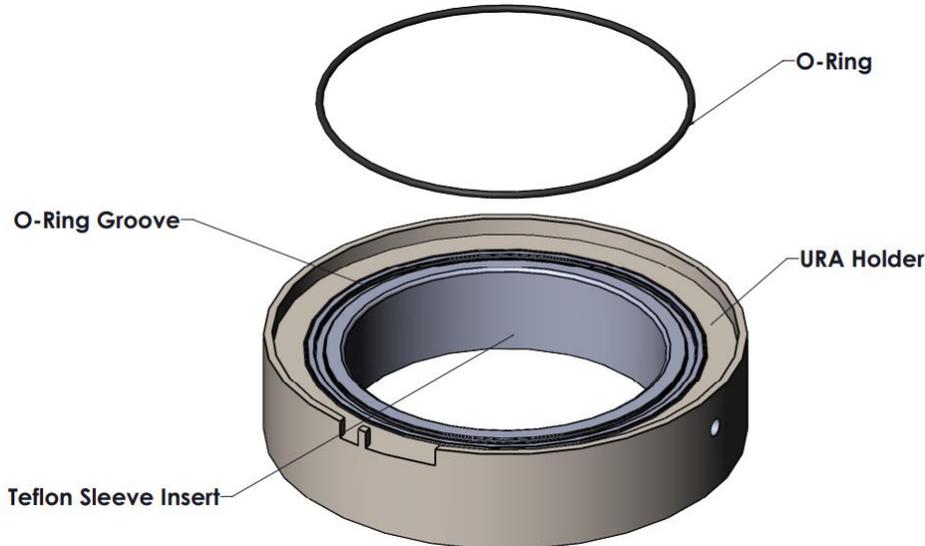


Figure 1. URA Holder with Teflon Sleeve Insert

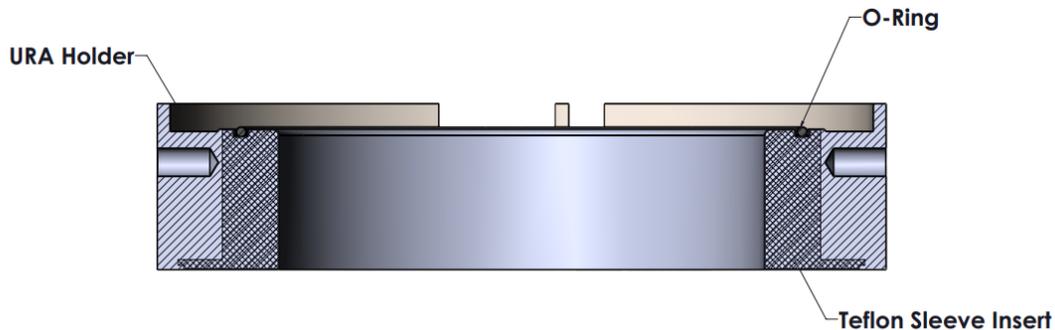


Figure 2. URA Holder with Teflon Sleeve Insert Cross Section

### 5) INSTALLATION OF THE ASSEMBLY (DISK AND HOLDER) INTO THE SYSTEM

To achieve a high degree of success in attaining accurate burst pressures and a leak-free joint, several steps are required. **It is imperative that a regimented bolt-up procedure is applied.**

- (1) Inspect the Companion Flanges:

- (1) Before installing the assembly into the system, ensure that the companion flange gasket surfaces are clean and free from all rust, corrosion, and foreign material. The allowable imperfections in the flange gasket surface should not exceed the depth of the surface finish grooves, and that the radial marks are no deeper than the depth of the flange surface finish and less than 50% in length of the overall gasket sealing surface width.

[www.zookdisk.com](http://www.zookdisk.com)

**Serving America, Central & South America**  
16809 Park Circle Drive, Chagrin Falls,  
Ohio 44022 USA  
Toll Free: +1 800 543 1043  
Phone: +1 440 543 1010  
E-mail: [sales@zookdisk.com](mailto:sales@zookdisk.com)

**Serving Europe, Middle East & Africa**  
Navigation House, Bridge Street  
Killamarsh, Sheffield,  
S21 1AL UK  
Phone: +44 (0) 1909 560999  
E-mail: [sales.europe@zookdisk.com](mailto:sales.europe@zookdisk.com)

**Serving Canada**  
4400 South Service Rd,  
Burlington, Ontario L7L 5R8 CA  
Toll Free: +1 800 370 6057  
Phone: +1 905 681 2885  
E-mail: [sales.canada@zookdisk.com](mailto:sales.canada@zookdisk.com)

**Serving Asia Pacific**  
Menara LGB TTDL, Unit 6-3A, Level 6,  
1, Jalan Wan Kadir, Taman Tun Dr. Ismail,  
60000 Kuala Lumpur, Malaysia  
Phone: +603 2706 0098  
E-mail: [sales.asia@zookdisk.com](mailto:sales.asia@zookdisk.com)



# INSTALLATION INSTRUCTIONS

## For Flat Seated Bolted Type URA Series Disk Holders

### Rupture Disk Series: URA

- (2) To assure proper sealing of the assembly and flange gaskets parallelism, flatness, and waviness should be within 0.008" (0.2mm) or better.
- (2) Insert the assembly between the companion flanges insuring that **ALL FLOW ARROWS POINTING IN THE PROPER DIRECTION**. The convex domed side of the disk should be facing towards the process pressure.
- (3) Install new gaskets between the assembly and the companion flanges. We recommend compressed fiber gasket no greater than 1/16" (1.6mm) thick. The user is cautioned to select a gasket material that is suitable for the intended service and will resist "cold flow". In the event of cold flowing of the gaskets, the assembly torque will relax in non-pre-torqueable holders, which can result in **erratic** bursting of the rupture disk and/or leakage.
- (4) Do not apply any compounds to the gasket or seating surfaces.
- (5) Reinstall companion flange studs and nuts, making sure they are free of any foreign matter, and well lubricated. Lubricate the nut bearing surfaces as well. Lubrication is not required if PTFE coated fasteners are used.
- (6) **WARNING:** If the assembly is installed upside down, the burst pressure may exceed the marked burst pressure. **PAY CLOSE ATTENTION TO THE DIRECTIONAL ARROWS ON THE DISK AND HOLDER.**
- (7) **WARNING:** The disk tag is designed to provide critical information about the Rupture Disk only and should NOT be used as a hand hold to lift or adjust the assembly during installation. This practice can damage the disk resulting in failure of the disk below its marked burst pressure.
- (8) Run-up all nuts finger tight while maintaining parallelism in accordance with 5.a.2.
- (9) Using a torque wrench, develop the required torque incrementally in a minimum of four (4) steps in a crisscross pattern. The initial torque should be no more than 30% of the final required torque listed in table #1A & #1B. After following this sequence, a final tightening should be performed bolt-to-bolt to ensure that all bolts have been evenly torqued.
  - (1) The use of hardened washers will enhance the installation by reducing the friction due to possible galling of the nut bearing surfaces.
- (10) Verify parallelism is in accordance with 5.a.2.
- (11) Companion flange torque values should be verified periodically at the system temperature.

[www.zookdisk.com](http://www.zookdisk.com)

**Serving America, Central & South America**  
16809 Park Circle Drive, Chagrin Falls,  
Ohio 44022 USA  
Toll Free: +1 800 543 1043  
Phone: +1 440 543 1010  
E-mail: [sales@zookdisk.com](mailto:sales@zookdisk.com)

**Serving Europe, Middle East & Africa**  
Navigation House, Bridge Street  
Killamarsh, Sheffield,  
S21 1AL UK  
Phone: +44 (0) 1909 560999  
E-mail: [sales.europe@zookdisk.com](mailto:sales.europe@zookdisk.com)

**Serving Canada**  
4400 South Service Rd,  
Burlington, Ontario L7L 5R8 CA  
Toll Free: +1 800 370 6057  
Phone: +1 905 681 2885  
E-mail: [sales.canada@zookdisk.com](mailto:sales.canada@zookdisk.com)

**Serving Asia Pacific**  
Menara LGB TTDL, Unit 6-3A, Level 6,  
1, Jalan Wan Kadir, Taman Tun Dr. Ismail,  
60000 Kuala Lumpur, Malaysia  
Phone: +603 2706 0098  
E-mail: [sales.asia@zookdisk.com](mailto:sales.asia@zookdisk.com)

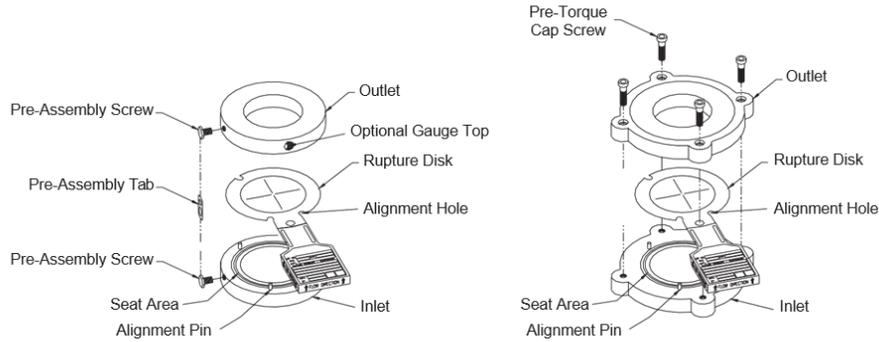


Figure 3. Insert Holder

Figure 4. Pre-Torque Holder

| Table #1A – Recommended Torque Table |     |               |          |   |        |     |                                 |     |     |
|--------------------------------------|-----|---------------|----------|---|--------|-----|---------------------------------|-----|-----|
| Size                                 |     | Flange Series |          | Pre-assembly Cap Screws Torque (For Pre-torque SRPT Holders Only) |        |     | Companion Flange Bolting Torque |     |     |
| IN                                   | MM  | ANSI          | DIN      | 12 Point Socket Size  | FT-LBS | N-M | FT-LBS                          | N-M |     |
| 1"                                   | 13  | 150           | 10/16    | 1/4   | 10     | 26  | 20                              | 26  |     |
|                                      |     | 300           | 25/40    | 1/4   | 16     | 41  | 40                              | 41  |     |
|                                      |     | 600           | 64/100   | 1/4   | 16     | 41  | 40                              | 55  |     |
|                                      |     | 900           | -        | -   | -      | -   | -                               | 122 | -   |
|                                      |     | 1500          | 160/250  | -   | -      | -   | -                               | 122 | 119 |
| 1-1/2"                               | 40  | 150           | 10/16    | 5/16  | 16     | 21  | 25                              | 43  |     |
|                                      |     | 300           | 25/40    | 5/16  | 32     | 43  | 80                              | 91  |     |
|                                      |     | 600           | 64/100   | 5/16  | 32     | 43  | 80                              | 91  |     |
|                                      |     | 900           | -        | -   | -      | -   | -                               | 182 | -   |
|                                      |     | 1500          | 160      | -   | -      | -   | -                               | 182 | 155 |
|                                      |     | -             | 250      | -   | -      | -   | -                               | -   | 194 |
| 2"                                   | 50  | 150           | 10/16    | 3/8   | 24     | 33  | 40                              | 55  |     |
|                                      |     | 300           | 25/40/64 | 3/8   | 32     | 48  | 65                              | 109 |     |
|                                      |     | 600           | 100      | 3/8   | 32     | 48  | 65                              | 137 |     |
|                                      |     | 900           | -        | -   | -      | -   | -                               | 122 | -   |
|                                      |     | 1500          | 160      | -   | -      | -   | -                               | 122 | 298 |
|                                      |     | -             | 250      | -   | -      | -   | -                               | -   | 149 |
| 3"                                   | 80  | 150           | 10/16    | 7/16  | 35     | 47  | 50                              | 34  |     |
|                                      |     | 300           | 25/40/64 | 7/16  | 93     | 127 | 80                              | 91  |     |
|                                      |     | 600           | 100      | 7/16  | 93     | 127 | 80                              | 114 |     |
|                                      |     | 900           | -        | 7/16  | 139    | -   | 122                             | -   |     |
| 4"                                   | 100 | 150           | 10/16    | 7/16  | 63     | 85  | 45                              | 61  |     |
|                                      |     | 300           | 25/40    | 7/16  | 91     | 123 | 85                              | 102 |     |
|                                      |     | 600           | 64       | 3/8   | 51     | 70  | 120                             | 146 |     |
|                                      |     | -             | 100      | 3/8   | -      | 70  | -                               | 176 |     |
|                                      |     | 900           | -        | 1/2   | 122    | -   | 275                             | -   |     |
| 6"                                   | 150 | 150           | 10/16    | 3/8   | 48     | 64  | 95                              | 108 |     |
|                                      |     | 300           | 25/40    | 3/8   | 58     | 79  | 80                              | 171 |     |
|                                      |     | 400           | -        | 7/16  | 98     | -   | 130                             | -   |     |
|                                      |     | 600           | 64       | 7/16  | 91     | 123 | 180                             | 389 |     |
|                                      |     | -             | 100      | 7/16  | -      | -   | -                               | 259 |     |

Note 1 - Torque values assume the threads are lightly oiled and free running.

Note 2 - For some installation increased torque may be required for sealing. Consult ZOOK for increased torque values.

Note 3 - Companion flange torque values should be verified periodically at the system temperature.

www.zookdisk.com

**Serving America, Central & South America**  
16809 Park Circle Drive, Chagrin Falls,  
Ohio 44022 USA  
Toll Free: +1 800 543 1043  
Phone: +1 440 543 1010  
E-mail: sales@zookdisk.com

**Serving Europe, Middle East & Africa**  
Navigation House, Bridge Street  
Killamarsh, Sheffield,  
S21 1AL UK  
Phone: +44 (0) 1909 560999  
E-mail: sales.europe@zookdisk.com

**Serving Canada**  
4400 South Service Rd,  
Burlington, Ontario L7L 5R8 CA  
Toll Free: +1 800 370 6057  
Phone: +1 905 681 2885  
E-mail: sales.canada@zookdisk.com

**Serving Asia Pacific**  
Menara LGB TTDL, Unit 6-3A, Level 6,  
1, Jalan Wan Kadir, Taman Tun Dr. Ismail,  
60000 Kuala Lumpur, Malaysia  
Phone: +603 2706 0098  
E-mail: sales.asia@zookdisk.com



# INSTALLATION INSTRUCTIONS

## For Flat Seated Bolted Type URA Series Disk Holders

### Rupture Disk Series: URA

| Table #1B – Recommended Torque Table |     |               |        |  |        |     |                                    |      |
|--------------------------------------|-----|---------------|--------|--|--------|-----|------------------------------------|------|
| Size                                 |     | Flange Series |        | Pre-assembly Cap Screws Torque<br>(For Pre-torque SRPT Holders Only) |        |     | Companion Flange Bolting<br>Torque |      |
| IN                                   | MM  | ANSI          | DIN    | 12 Point<br>Socket Size  | FT-LBS | N-M | FT-LBS                             | N-M  |
| 8"                                   | 200 | 150           | 10/16  | 7/16   | 44     | 59  | 75                                 | 57   |
|                                      |     | 300           | 25     | 7/16   | 91     | 123 | 122                                | 149  |
|                                      |     | -             | 40     | 7/16   | 91     | 12  | -                                  | 179  |
|                                      |     | 600           | 64/100 | -  | -      | -   | -                                  | -    |
| 10"                                  | 250 | 150           | 10/16  | 7/16   | 61     | 83  | 122                                | 149  |
|                                      |     | 300           | 25     | 1/2  | 91     | 123 | 182                                | 311  |
|                                      |     | -             | 40     | -  | -      | 123 | -                                  | 350  |
|                                      |     | 600           | 64/100 | -  | -      | -   | -                                  | -    |
| 12"                                  | 300 | 150           | 10/16  | 5/16   | 26     | 35  | 122                                | 149  |
|                                      |     | 300           | 25     | 7/16   | 85     | 115 | 272                                | 310  |
|                                      |     | -             | 40     | -  | -      | 115 | -                                  | 348  |
|                                      |     | 600           | 64/100 | -  | -      | -   | -                                  | -    |
| 14"                                  | 350 | 150           | 10/16  | -  | -      | -   | 185                                | 198  |
|                                      |     | 300           | 25     | -  | -      | -   | 275                                | 440  |
|                                      |     | -             | 40     | -  | -      | -   | -                                  | 489  |
|                                      |     | 600           | 64/100 | -  | -      | -   | -                                  | -    |
| 16"                                  | 400 | 150           | 10/16  | -  | -      | -   | 185                                | 237  |
|                                      |     | 300           | 25     | -  | -      | -   | 385                                | 617  |
|                                      |     | -             | 40     | -  | -      | -   | -                                  | 678  |
|                                      |     | 600           | 64/100 | -  | -      | -   | -                                  | -    |
| 18"                                  | 450 | 150           | 10/16  | -  | -      | -   | 270                                | -    |
|                                      |     | 300           | 25     | -  | -      | -   | 385                                | -    |
|                                      |     | -             | 40     | -  | -      | -   | -                                  | 651  |
|                                      |     | 600           | 64/100 | -  | -      | -   | -                                  | -    |
| 20"                                  | 500 | 150           | 10/16  | -  | -      | -   | 270                                | 346  |
|                                      |     | 300           | 25     | -  | -      | -   | 385                                | 592  |
|                                      |     | -             | 40     | -  | -      | -   | -                                  | 710  |
|                                      |     | 600           | 64/100 | -  | -      | -   | -                                  | -    |
| 24"                                  | 600 | 150           | 10/16  | -  | -      | -   | 385                                | 493  |
|                                      |     | 300           | 25/40  | -  | -      | -   | 700                                | 986  |
|                                      |     | 600           | 64/100 | -  | -      | -   | -                                  | 1166 |

Note 1 - Torque values assume the threads are lightly oiled and free running.  
 Note 2 - For some installation increased torque may be required for sealing. Consult ZOOK for increased torque values.  
 Note 3 - Companion flange torque values should be verified periodically at the system temperature.

[www.zookdisk.com](http://www.zookdisk.com)

**Serving America, Central & South America**  
 16809 Park Circle Drive, Chagrin Falls,  
 Ohio 44022 USA  
 Toll Free: +1 800 543 1043  
 Phone: +1 440 543 1010  
 E-mail: sales@zookdisk.com

**Serving Europe, Middle East & Africa**  
 Navigation House, Bridge Street  
 Killamarsh, Sheffield,  
 S21 1AL UK  
 Phone: +44 (0) 1909 560999  
 E-mail: sales.europe@zookdisk.com

**Serving Canada**  
 4400 South Service Rd,  
 Burlington, Ontario L7L 5R8 CA  
 Toll Free: +1 800 370 6057  
 Phone: +1 905 681 2885  
 E-mail: sales.canada@zookdisk.com

**Serving Asia Pacific**  
 Menara LGB TTDL, Unit 6-3A, Level 6,  
 1, Jalan Wan Kadir, Taman Tun Dr. Ismail,  
 60000 Kuala Lumpur, Malaysia  
 Phone: +603 2706 0098  
 E-mail: sales.asia@zookdisk.com